

Hardware Region & Zone Kit User Guide

1. With the region & zone kit installed you will hear a beep when you first connect the mains cable (And any subsequent time you reconnect the mains).
2. Your player is region free for DVD and zone A for Blu-ray.
3. **Note:** Remember to go to *Video Setup > TV System* and set the TV system to *Multi-system* to enable 60Hz NTSC and 50Hz PAL output. This may not work if you use *Auto* output resolution since output is then controlled by the displays EDID chip which may, for example, state max res 1080p60Hz. In that case *Auto* will produce 1080p60Hz even from PAL discs. *Auto* is really only there to ensure a picture on first connection. Use the resolution that best matches your display.
4. **Important Note: Region & Zone changes should be made with the player in standby.**
5. To switch to a different zone for Blu-ray, press and hold the remotes blue button for around 5 seconds until you hear beeps, now release the blue button and press 2 for zone B (you will hear 2 beeps), or press 3 for zone C (you will hear 3 beeps), or to revert to zone A press 1 (you will hear 1 beep). **Note:** BR zone is retained till you change it again.
6. To switch to a specific region for DVD (other than region free), press and hold the remotes red button for around 5 seconds until you hear beeps, now release the red button and press 1 for region 1 (you will hear 1 beep), press 2 for region 2 (you will hear 2 beeps) and so on through the 6 DVD regions. To switch back to region free, press 0 (you will hear a long beep). **Note:** DVD region retained till you change it again.

